


Pluscig

USER MANUAL

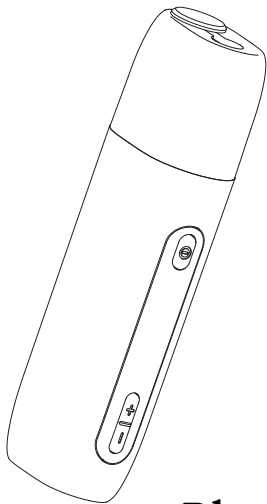

Pluscig P9

CONTENT

English


日本語

한국어

Thank you very much for choosing our product, please read this user manual carefully before using the product.

1. Introduction

This product has a built-in 3500 mAh high rate lithium battery, and a bar-shaped heating atomizer. Heating component can be disassembled and changed. Detailed description of the function is as following.

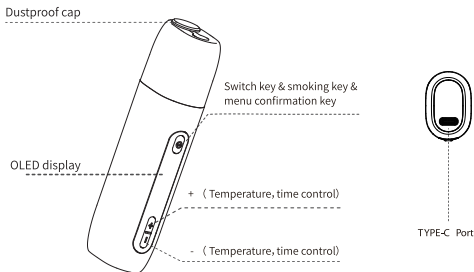

2. Instruction

1. Power ON/OFF

Press the power button 3 times in 2 seconds to power ON/OFF. In the state of the power on, it will turn off automatically after 10 minutes without any operation.

2. OLED introduction



3. Smoking temperature selection

Smoking temperature can be adjusted by pressing the "+" & "-"

key. Each time +5 or -5 °C, temperature range is 250 ~350 °C.
Advice: mint cigarette: 260 °C; plain: 300 °C; plainplus: 340 °C.

4. Menu Setting


Press the "+" & "-" button at the same time for 3 seconds to enter the menu.



From left to right are Cleaning function, Smoking time setting, Smoking amounts reset and Preheating time selection. Press "+" / "-" to choose a function, and press power button to enter the function.

- 4.1  Choose the function, and press the power button: if need to remove smoke odors? YES choose Y, NO

choose N. Please choose Y and press the power button. If choose N and press "the power button" to return to the main interface.



REMOVE? YES choose Y, NO choose N. Choose Y and press the power button, then enter into the next level menu.



Choose N and press ok to return to the main interface.

Removing smoke odors time: 30s, the countdown display in the lower left corner of the display screen is convenient for users to view.



- 4.2  Press "+" & "-" to choose a time and press

the power button to set, or wait for 10s, it will set automatically. Time adjustable range is 180-300s, default 210s, and adjust unit is 5s.

4.3 Press the "+/-" to choose "Y/N". Choose "Y" and press power



button to reset the smoking amount. Choose "N" and press power button, it will return to the main interface.

4.4 Preheating time selection

There are 4 gears of preheating time. Customers can choose any gear according to the smoking habit.

1. The product default gear of preheating time is 0 gear.

2. Gears: 0 gear is 5-7 seconds, 1 gear is 7-10 seconds, 2 gear is 10-15 seconds, 3 gear is 15-20 seconds

(Note: The preheating time is based on the first use at a temperature of 250°C)

4.5 When the number of smoking amounts is a multiple of 5, this interface will automatically show.



4.6 If there is no setting operation after 15s, it will exit and return to the standby interface automatically.


5. How to smoke

5.1 Choose cartridge and put it in

5.2 Select the temperature (You can't adjust the temperature when it is heating).

5.3 Keep pressing the power button (about 3 seconds) until the product vibrates and then release the button, the product will start heating. When it vibrates again, it means that the heating is completed and you can start Smoking. Smoking time: 180-300 seconds (The countdown displays in the lower left corner of the OLED) There will be one more vibration after smoking finished.


5.4 If you want to smoke again, please replace a cartridge and start again.



6. Methods of replacing cartridges

6.1 Rotate left and right to take out the cartridge, and put a new one in.

6.2 Take off the assit cover and then take out the cartridge, and put a new one in.



3. Charge & residual battery display.

Charge: After shutdown, please use an adaptor and connect to the USB cable to charge the product. When charging finish, the battery display is full. When the battery power drops to 20%, the battery power displayed on the display will flash to remind you to charge, please remember to charge in time.

4. Specifications

Model	Pluscig P9
Size	109*36*24mm
Material	PEEK
Input Voltage	5V/1.5A
Output Voltage	3.7V
Battery Capacity	3500 mAh
Working	Insert cartridge,heating with low temperature
Heating Time	The default time is 210s. The adjustable range is 180-300 seconds
Charge	Type-C (Please choose an adaptor for charging.)
Protection	Low voltage protection;overcharging protection; short circuit protection
Heating Rod	Heating rod works with constant temperature

5. Abnormal condition and Solution

Abnormal Condition	Solution
OPEN The screen shows OPEN	If the wire is not well welded or broken, please contact the after-sale service
SHORT The screen shows SHORT	Short circuit, please contact after - sale service
The button does not respond after starting up	Please check whether there is a connected charging device. If so, please remove it.
There is no change in battery state when charging	Please check whether the adapter or charging cable is connected.
No smoke or smoke less	Please check whether the battery has electricity or low power, and charge it in time
Cartridge cannot be inserted	Check for cartridges residue left in the smoke tank
After smoking, the tar seeps into the cigarette paper.	Clean the tar in time to avoid damaging the battery inside the product

6. Notices

1. Please don't dismantle the product, or it won't be in the warranty.
2. Do not throw the product , man-made damage is not in the warranty scope.
3. The product does not have waterproof function; Water intake is not in warranty.
4. Please choose a adapter with safty regulation to charge the product. certification, and the charging voltage DC cannot exceed 5.5V.
5. When charging the product, please stay away from the high temperature environment or ignition source.
6. During heating and smoking, please do not remove the assit cover to prevent scalding.
7. Please charge the product in time when low battery.
8. Do not use the product during charging.
9. The product is suitable for adults, please stay away from children, pregnant women, atients and pets.
10. Nicotine - containing tobacco or pod are not available.


7 . Packing list

1X Pluscig P9	1X Type-C Cable	1X Cotton Swab
1X User Manual	1X QC Card	1X Gift Box

弊社の製品を購入していただき、誠にありがとうございます。全面的に製品を理解するために、ご使用前に本製品の取扱説明書と保障証明書をお読みください。

一. 製品紹介

この製品は 3500mAh の高倍率リチウム電池が内蔵し、棒状発熱体アトマイザーがあります。以下に機能詳細を紹介します

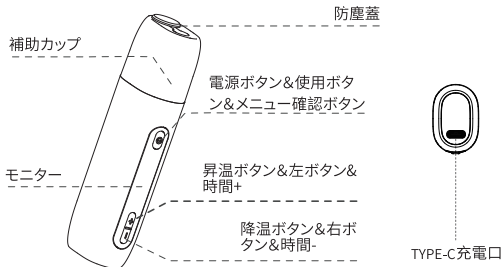

二. 使用操作

1.ON/OFF

2秒以内に電源ボタンを3回押すと電源がON/OFFになります。
10分以内に何の操作もしないと自動的にOFFになります。

2. モニター紹介



3. 温度の選択

昇温ボタンと降温ボタンを通して温度の調節ができます。単位は5°Cで範囲は250～350°Cです。

参考:薄荷味は260°C;原味は300°C;濃い原味は340°C。

4. メニュー設置

メニュー設置:同時に「+」「-」ボタンを押す。
時間設置、電動消臭、使用本数リセット、予熱時間選択は「+」「-」ボタンを通して選択できます。確認ボタンで相応な機能に入ります。



4.1  当機能を選び、確認ボタンを押し次のメニューに入ります。

電動消臭しますか? はいY; いいえN
Yを選び確認ボタンを押すと次の選択に行き、Nを選び確認ボタンを押すとメイン画面に戻ります。

CLEAN? Y N

補助カップは外してますか? はいY; いいえN
確かに外していると、Yを押し直接電動消臭に入ります。Nを選び確認ボタンを押すとメイン画面に戻ります。

REMOVE? Y N

電動消臭は30秒です。モニターでカウントダウンします。

30s CLEANING

4.2 昇温ボタンと降温ボタンで切り替えます。TIMERを選び確認ボタンを押すと加熱時間の設置ができます。調節可能な時間は180～300秒で、默認時間は210秒です。5秒単位で調節できます。時間を確認してから確認ボタンを押し、或いは10秒間待つと自動確認できます。終わるとメイン画面に戻ります。



4.3 使用本数リセット



RESET
COUNTER Y N

4.4 予熱時間選択

- 1、黙認の予熱段階は0で、5-7sです。
- 2、使用者は自身の使用習慣により、予熱時間の選択が可能です。
1段階は7-10s、2段階は10-15s、3段階は15-20sです。


4.5 使用本数が5の倍数になる場合、自動的電動消臭確認画面が出ます。



4.6 15秒間自動的に出た画面を操作しないと、メインメニューに戻ります。

5. 使用方法

5.1 画像のように、加熱品を挿入します。



5.2 使用者好みの温度を選びます(加熱が始まると温度の切り替えは不可能。)


5.3 電源&使用ボタンを約3秒ほど長押しすると本体が振動し加熱が開始されます。もう一度本体が振動すると使用可能です。使用時間は180-300秒(モニターでカウントダウンする)、時間が切れるともう一度振動します

5.4 続けて2本目を使う場合、主電源をオフにせずに5.1の操作から行ってください

6. 加熱品交換

方法1: 加熱品を握り、左右2回回って引き出し、新しい加熱品を挿入します。

方法2: 補助カップを取り外すボタンで補助カップと加熱品を一緒に取り出します。加熱品を抜き出して、補助カップを元の所に戻し新しい加熱品を挿入します。



三. 充電&残量バッテリー確認

充電:電源をOFFにしてから付属のUSBもしくは安全規定認定のあるACアダプターを使用してください。充電中モニターに充電進度が表示されます。

残量バッテリー確認:モニターに表示する電量を参考してください。

残量が20%以下になると、モニターにあるバッテリーの画像が点滅します。これは充電してくださいという意味です。継続残り20%の使用も可能です。

四. 製品パラメーター

製品品番	Pluscig P9
サイズ	109*36*24mm
材質	PEEK
入力電圧	5V/1.5A
出力電圧	3.7V
電池容量	3500mAh
作業方式	加熱品を挿入、針のセラミックが低温加熱
使用時間	黙認210秒、調節範囲は180秒-300秒
充電方式	Type-C(安全規定認定のあるACアダプターを使用してください)
保護機能	過重放電、過重充電、ショート保護。
加熱棒	針のセラミック、恒温制御

五. 異常状況と扱い方法

異常状況	扱い方法
モニターにOPENが現れる時	故障です、A/Sに連絡してください
モニターにSHORTが現れる時	ショート故障です。A/Sに連絡してください
電源を入れても反応がない	充電中ですとすぐ抜いてください
充電する時、何の変化もない	ACアダプターとUSBケーブルを検査してください。

使用不可能	バッテリー残量を確認してください。残量が少ないと、速やかに充電してください
加熱品が差し込めない	補助カップの中に異物質があるか確認する
使用終わった後、油が残っている場合	油が生ずた場合、速やかに綿棒で掃除してください。機体内部に滲むと損傷します

六. 注意事項

1. 電子タバコ主体を外すことは禁止です、何か問題が起こすと、弊社は責任を負わない。
2. 電子タバコを落さないでください。落とすことにより機能問題が起こすと、弊社は任を負わない。
3. 電子タバコに防水機能がないので、本体内部に水がしみ、これで問題が起こすと、弊社は責任を負わない。
4. DC5.5V以上の電源で電子タバコのUSB口に充電しないでください。これで問題が起こすと、弊社は責任を負わない。
5. 充電する際、高温環境と火種から遠ざけてください。
6. 加熱及び使用途中には補助カップと断熱保護カバーを引き出さないでください。
7. 電量残量が少ない時は、速やかに充電してください。
8. 充電する際、ご使用しないでください。
9. 本製品は成年者向けで、子供、妊婦、病人及びペットには離れて置いてください。
10. ニコチンが含まれているリキッドや加熱品の使用はできません。


七. 包装リスト

1X Pluscig P9	1X Type-c充電ケーブル	1 X 綿棒
1X 説明書	1X 合格証	1 X パッケージ

Pluscig P9 를 구매해주셔서 감사합니다. 제품 이해를 돕기 위하여 사용전 본 제품의 설명서와 품질보증서를 꼭 읽어주시기 바랍니다.

一. 제품소개

본 제품은 리튬이온 배터리를 탑재한 송곳형 가열체로 구성되어 있습니다. 해체를 하시면 AS가 불가능합니다. 상세한 기능은 다음과 같습니다.

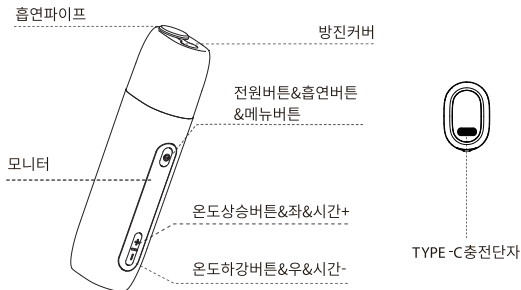

二. 사용방법

1. 전원켜기/끄기

버튼을 2초이내 빠르게 3회이상 눌러주시면 ON/OFF 됩니다.
대기모드에서 10분동안 조작이 없으면 자동으로 OFF 됩니다.

2. 모니터 설명



3. 온도조절하기

온도 상승버튼과 하강버튼을 사용하여 온도를 조절할 수 있습니다. 조절단위는

5도이며 250~390도입니다. 불완전 연소의 가능성이 있으므로 온도는 낮게 설정하시기를 권장합니다. 참고 : 박하스타일 = 260도 / 오리지널 = 300도 / 연초스타일 = 340도

4. 메뉴설정

상승버튼과 하강버튼을 동시에 누르면 메뉴화면이 출력됩니다. 왼쪽부터 “자동청소 / 시간설정 / 흡연수량 초기화 / 예열시간설정” 기능이며 상승, 하강버튼을 이용하여 이동할 수 있습니다.



해당 위치에서 전원버튼을 누르시면 해당 메뉴를 이용할 수 있습니다.



4.1 자동청소기능. 자동청소기능은 고온으로 심지를 탄화세척하는 기능입니다. 반드시 흡연파이프, 담배등을 제거하시고 사용해야 합니다. 자동청소 기능을 선택하시면 다음과 같은 내용이 출력됩니다.

- CLEAN? (자동청소기능을 실행하시겠습니까?)
Y(예) 또는 N(아니오)
Y를 선택하면 다음 메뉴로 이동합니다.

CLEAN? Y N

- REMOVE?” (흡연파이프는 제거하였나요?)
Y(예) 또는 N(아니오)
Y를 선택하면 다음 메뉴로 이동합니다.

REMOVE? Y N

- 자동청소기능은 30초동안 진행됩니다.
작동 중 만지시면 고장의 원인이 됩니다.
청소가 끝나면 입 바람으로 재를 제거하세요

30s CLEANING

4.2 시간설정 기능

시간설정 기능은 흡연시 작동하는 시간을 설정하는 기능입니다. 조절단위는 5초이며 180초(3분) ~ 300초(5분)까지 설정할 수 있습니다.



- 메뉴에서 2번째 시간설정 이미지를 선택합니다.
- 상승버튼과 하강버튼으로 시간을 설정하고 전원버튼을 누르면 셋팅이 완료됩니다.

4.3 흡연수량 초기화
흡연수량을 0000으로 초기화 시키는 기능입니다.



RESET
COUNTER Y N

4.4 예열시간설정

1. 초기예열시간은 0단이며 5초 입니다.
2. 사용자는 자신의습관에 따라 ,예열시간을 선택할수 있습니다
1단은 7-10초 , 2단은 10-15초 , 3단은 15-20초 입니다.

4.5 흡연 개수 5개마다 청소기능 알림

흡연 개수가 5의 배수가 되면 청소기능 알림화면이 나타납니다. 기능을 “선택 / 취소” 할 수 있습니다.



- 1 초내에 아무 작동이 없는 경우 초기 화면으로 이동합니다.

5. 흡연시작하기


5.1 가열송곳에 직선으로 담배스틱을 삽입합니다.

5.2 원하는 온도를 설정하세요 (가열중 조작 불가능)

5.3 전원 버튼을 3초 이상 눌러주시면 진동이 오면서 예열이 시작됩니다. (진동이 오면 손을 떼주세요)

약 7초 후에 진동이 한번 더오면 예열이 끝난 경우이며 이때부터 흡입하시면 됩니다. (설정한 흡연시간동안 모니터 왼쪽 밑에 카운트다운이 됩니다.)


5.4 연속 흡연을 하려면 담배스틱을 제거하고 5.1부터 다시 조작해주세요



6. 담배스틱교체

※방법1 : 담배스틱을 잡고 좌~우 2회 빙빙돌린 후 위로 빼서 제거합니다.

※방법2 : 흡연파이프와 담배스틱을 같이 제거합니다.



三. 충전 및 주의사항

1. 충전기 선택

본 제품은 5V1.5A(암페어) 충전기를 사용해 주세요

1.5A (암페어)이상으로 충전시 회로의 수명이 짧아지고 고장의 원인이 됩니다.
(휴대폰 충전기 절대 사용금지 / 이런 경우 AS 불가능)

2. 충전방법

본 제품은 리튬이온배터리로 충전을 자주 시켜주셔야 배터리 성능이 오래갑니다.
배터리 잔량이 30% 이내일 경우 배터리 성능이 급격하게 떨어집니다.

배터리잔량이 20%이하로되면,모니터의 배터리가 깜박입니다.
빨리 충전하라는 뜻이며 계속사용할수는 있습니다.

四. 제품 스펙 설명

제품모델	Pluscig P9
사이즈	109*36*24mm
재질	내열성강한플라스틱
입력전압 /출력전압	5V/ 1.5A
배터리용량	3500mAh
흡연시간	기본210초, 조절범위는 180~300초
충전방식	5V 1.5A전용충전기를 사용해주세요
보호기능	과충전방지, 과방전보호, 합선보호
가열 방식	세라믹 송곳형 가열블레이드, 항온조절

五. 오류표시와 처리방법

오류표시	처리방법
모니터 OPEN 표시	고장임으로 A/S센터에 연락
모니터 SHORT 표시	합선고장으로 A/S센터에 연락
전원버튼이 작동안됨1	충전선이 연결되어 있으면 제거

전원버튼이 작동안됨2	방전된 경우로 즉시 충전
연무량이 갑자기 약할때	배터리 잔량을 확인
담배가 삽입되지 않을때	이물질이 있는지 확인
흡연후 타르가 남은 경우	기기손상의 원인이므로 즉시 제거

七. 주의사항

1. 본체를 절대로 분해하시면 안됩니다. AS가 불가능합니다.
2. 판매자가 AS책임이 없는 경우.
 - 구매자(소비자)과실에 의한 고장일 경우.
 - 기계 내부에 물이 들어간 경우 (방수기능이 없음).
 - DC 5.5V 또는 1.5A(암페어)를 초과하는 충전기를 사용한 경우.
3. 제품을 충전할 때 고온환경 또는 불에서 멀리 해주세요.
4. 흡연시 흡연파이프를 제거하시면 안됩니다.
5. 배터리 잔량이 적을 경우 즉시 충전해주세요.
6. 충전과정중에는 사용하지 말아주세요.
7. 본 제품은 성인상품이며 19세미안 청소년은 절대 사용하면 안됩니다.
8. 전용담배 이외의 제품은 절대 사용하시면 안됩니다.

八. 포장리스트

1 X Pluscig P9	1 X TYPE-C충전선	1 X 포장박스
1 X 면봉	1 X 설명서	1 X 합격증